

ACR-U™

AudioControl®
Making Good Sound Great™

UNIVERSAL REMOTE LEVEL CONTROL

PRECISE AND TACTILE REMOTE LEVEL CONTROL
ADD VOLUME CONTROL TO ANY LINE-LEVEL SIGNAL
REMOTE CAN BE FLUSH-MOUNTED FOR CUSTOM INSTALLATIONS

UPGRADE ACCESSORY

ACR-U™

UNIVERSAL REMOTE LEVEL CONTROL

Add volume control to any system

The ACR-U is a universal remote volume control which can be inserted into any line-level signal path. The ACR-U can be surface or custom-mounted to add subwoofer level control, zone level control, total system volume control, and more to your audio system. Installation is simple and no power is required.

Quick Start:

1. Install the ACR-U Hub between a line level source (head unit, DSP, EQ, Crossover) and your amplifier
2. Connect the output of your line level source to the input of the ACR-U Hub
3. Connect the output of the ACR-U Hub to your amplifier
4. Connect the ACR-U Remote to the ACR-U Hub using the included 20 inch (0.5 meter) Cat5e cable*
5. The ACR-U Remote and Hub can be mounted using the integrated mounts. The ACR-U Remote can be disassembled for custom flush-mount installations

What's Included?

ACR-U Remote, ACR-U Hub, Cat5e Cable (0.5 meter)

Specifications

Audio Channels..... 2 (RCA)
Insertion Loss..... 0.017 dB
Attenuation Range..... -97 dB
Juggling Potential..... add 1 bean bag
Warranty..... 5 Years

